




For use with Atlantis sheet membrane

EASYNICHE INSTALLATION INSTRUCTIONS

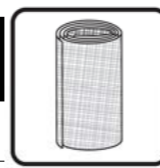

Components supplied with this system:

- Niche
- Primer
- Pozi S/S Screws
- Connection Sheet **A** (for use with liquid waterproofing) **DISCARD**
- 80mm Connection Strip **B** (for use with liquid waterproofing) **DISCARD**
- 80mm Membrane Strip **C** (for use with Atlantis sheet membrane) **USE**



Fig. 1.

Fit Niche into Wall

STEP 1: Measure and create extra framing to support the EasyNiche in the desired position. Ensure that screw holes line up with supporting nogs/ studs. (see Fig 1). Before screwing into wall position, ensure that wallboard will finish flush with outside edge of EasyNiche flange. Pack out EasyNiche if necessary.

STEP 2: Install wallboard to finish flush with outside edge of the EasyNiche. (Fig 2.)

Apply Membrane

As the EasyNiche is already 100% waterproof, the function of the Membrane is to provide a waterproof connection to the wall and to aid adhesion of tiles.

STEP 3: Follow Membrane Application Instructions. Apply primer over full shower wall surface (as directed). (Fig 3).

STEP 4: Ensure EasyNiche surfaces are clean and free of dust. (Clean with acetone or methylated spirits only.)

STEP 5: Apply Membrane as per Membrane Instructions, including one full drop over installed EasyNiche. (Fig 4).

STEP 6: With the sharp knife, carefully cut out as a single piece the portion of the loose Membrane over the Easyniche cavity. (Fig 5).

STEP 7: Apply the removed portion of the Membrane to the back face of the Niche. Press firmly to ensure total adhesion. (Fig 6).

STEP 8: Apply the additional 80mm membrane strip (C) to inside edges of Niche (4 sides). Press firmly to ensure total adhesion. (Fig 7).

Niche is ready to be tiled

Most C2-rated tile adhesives are compatible with the Atlantis sheet membrane. SEE OVERLEAF.

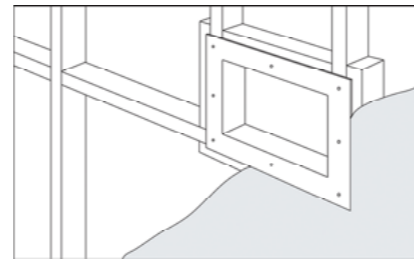


Fig. 2.

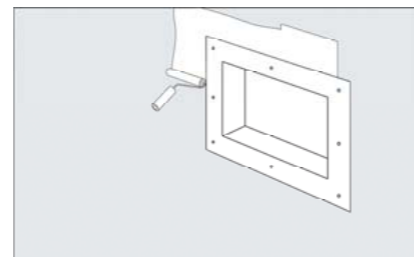


Fig. 3.

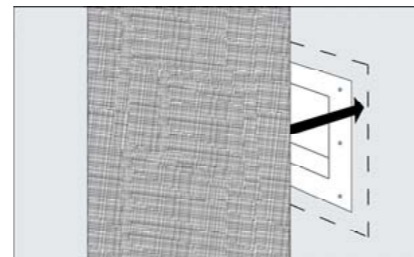


Fig. 4.

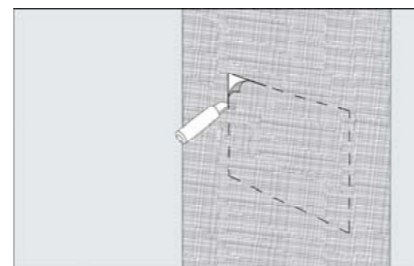


Fig. 5.

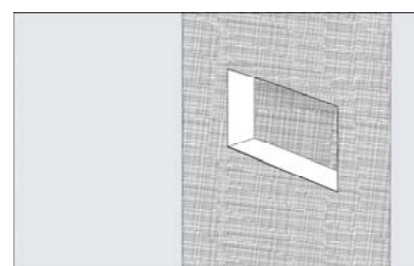


Fig. 6.

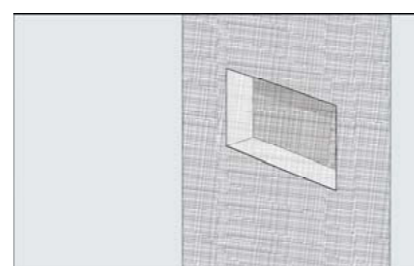


Fig. 7.



For use with Liquid Waterproofing

EASYNICHE INSTALLATION INSTRUCTIONS



Components supplied with this system:

- Niche
- Primer
- Pozi S/S Screws
- Connection Sheet **A** (for use with liquid waterproofing) **USE**
- Connection Strip **B** (for use with liquid waterproofing) **USE**
- Membrane Strip **C** (for use with Atlantis Sheet Membrane) **DISCARD**



Fig. 1.

Fit Niche into Wall

STEP 1: Measure and create extra framing to support the EasyNiche in the desired position. Ensure that screw holes line up with supporting nogs/ studs. (see Fig 1). Before screwing into wall position, ensure that wallboard will finish flush with outside edge of EasyNiche flange. Pack out EasyNiche if necessary.

STEP 2: Install wallboard to finish flush with outside edge of the EasyNiche. (Fig 2.)

Apply Connection Band

As the EasyNiche is already 100% waterproof, the function of the Membrane Band is to provide a waterproof connection to the wall and to aid adhesion of tiles and supplementary waterproofing.

STEP 3: Apply primer onto wallboard around outside perimeter of EasyNiche (to approx 75mm.) and then apply primer to EasyNiche Surface(Fig 3).

STEP 4: Ensure EasyNiche surfaces are clean and free of dust. (Clean with acetone or methylated spirits only.)

STEP 5: Using a sharp knife, cut along the trimmed line of the Connection Sheet (A) to fully remove the centre portion.

STEP 7: Starting by folding down 30mm of the backing release paper at the top edge, apply the Connection Sheet (A) over the entire Niche face and onto the primed wall board area. Press firmly to ensure total adhesion. (Fig 4).

STEP 8: With the sharp knife, trim the excess patch around the inside of the Niche recess. (Fig 5).

STEP 9: Apply the centre portion of the Connection Sheet (A) to the back face of the Niche. Press firmly to ensure total adhesion. (Fig 6).

STEP 10: Apply the 80mm Connection strip (B) to inside edges of Niche (4 sides). Press firmly to ensure total adhesion. (Fig 7).

Apply wall waterproofing and tiles

IMPORTANT: CONNECTION BAND MUST BE IN PLACE BEFORE ANY WATERPROOFING OR TILES ARE APPLIED.

The shower walls are now ready to be waterproofed and once this is done the EasyNiche is ready to be tiled.

Most Cement & Acrylic based liquid waterproofing products are compatible with this membrane. SEE OVERLEAF.

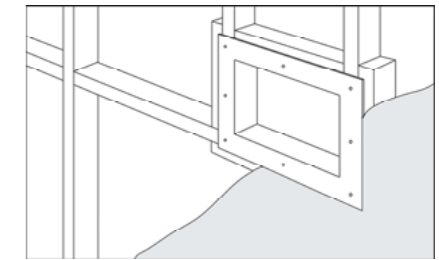


Fig. 2.

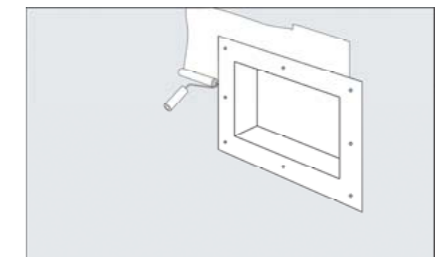


Fig. 3.

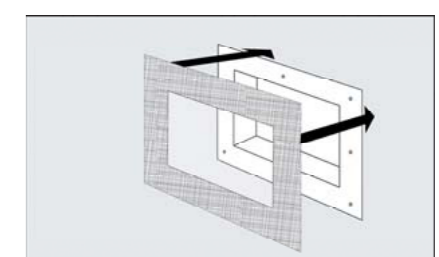


Fig. 4.

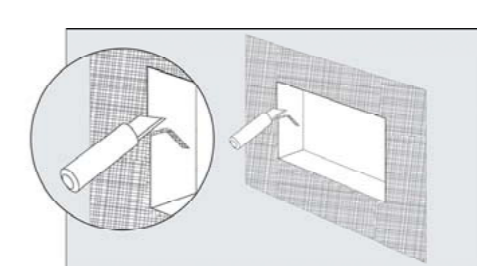


Fig. 5.

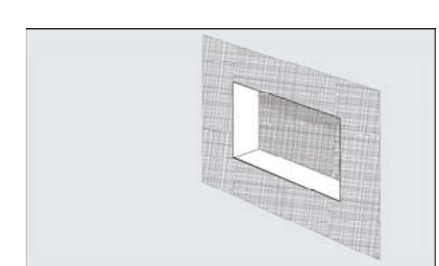


Fig. 6.

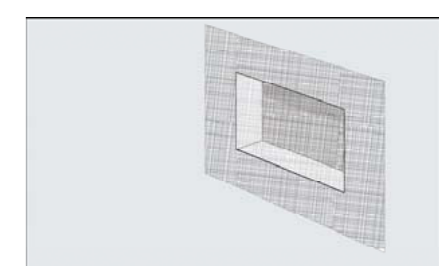


Fig. 7.



Waterproofing & Adhesives

RECOMMENDED COMPATIBLE LIQUID WATERPROOFING (FOR USE WITH REINFORCEMENT BANDS.)

Once the self-adhesive Connection Band has been applied to the wall and EasyNiche, the following liquid waterproofing products can be used with this system:

DUROSET and DUROQUIK Wet Area Membrane (Waterproofing Systems)
SUPERFLEX Wet Area Membrane (Ardex)
WPM001 / WPM300 Waterproofing Membranes (Ardex)
FLEXI-SEAL Interior Waterproofing System (Flexco)
MAPEGUM WPS and MAPELASTIC Wet Area Membranes (Mapei)
RASOLASTIK and RASOGUM Wet Area Membranes (Protective Surfaces)
BOSCOSEAL AC2 and AC3 Wet Area Membranes (ASA Bostik)
ULTRASEAL Wet Area Membrane (ASA Bostik)
DAMPFIX 2 & 3, DAMPFIX PU Wet Area Membrane (Structural Adhesives)
DAVCO K10 PLUS Wet Area Membrane (Davco)
LATICRETE 9235 9237 9240 Liquid Applied Waterproofing Membranes (Laticrete)
LIQUID FLASH 2 Waterproofing Membrane (Construction Chemicals)
CHEVALINE DEXX (Equus)

WARRANTY

Atlantis Bathroom Style warrants the adhesion of these products to the EasyNiche and Reinforcement Bands, subject to correct application by a properly qualified tradesperson.

INSTALLER:

Please consult with tile-layer on placement of EasyNiche to match finished tile grout lines.

RECOMMENDED TILE ADHESIVES (FOR USE WITH ATLANTIS FULL SHEET MEMBRANE).

Once self-adhesive membrane has been applied to the wall and/or EasyNiche area, the membrane is immediately ready to tile and a wide range of tile adhesives can be used:

ARDEX / ABA Optima, Ardex X77, Abaflex
ASA BOSTIK Conflex, ASA Superglue, Bostik Fixall and Megalastic
CONSTRUCTION CHEMICALS Ultima Gripflex, Fastflex
DAVCO Powder Mastic, Ultraflex
FLEXCO (NZ) Flexiwall & Floor (2 part)
KERAKOLL H40 Flex, H40 Tenax
LATICRETE Lataflex, Lataflex Gold
MAPEI Keraquick and Latex Plus (C2), Kerabond and Isolastic neat
RLA POLYMERS Resin Flex (2-part), Butyl Bond (2 part)
TECHNOKOLLA Techno-One, Techno-Star, Techno-Rap 2, Technostone

or any C2 rated tile adhesive outside the above specified range.

TILE ADHESIVES (FOR REINFORCEMENT BANDS)

Use only the recommended tile adhesive for the liquid waterproofing membrane used. (Refer to instructions with applicable liquid waterproofing membrane.)